


## LI'L HOE Operating Technique and Handy Tips

1. Start engine and tilt unit back until tines are off the ground. Squeeze throttle lever to full speed position (lever tight against grip). Remember, this unit is equipped with a governed engine and must always be run at full speed position.
2. Lower front of unit until tines begin to dig into ground to start tilling.
3. Unit will tend to walk forward at this point and must be firmly held back to allow tines to till.
4. If adjustments to tilling depth must be made, proceed as follows;
  - (a) Shut engine off by moving switch to off position.

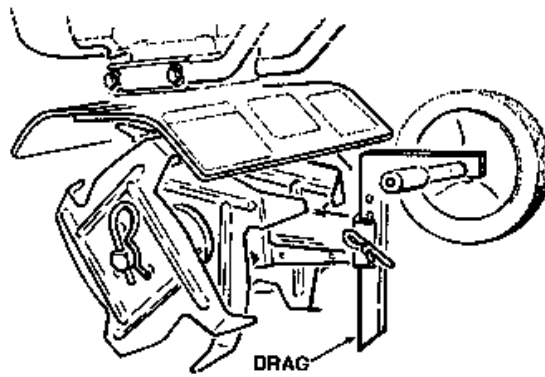

*Shown without Left Side Wheel  
for illustration purposes  
ONLY!*

- (b) Remove hairpin cotter and clevis pin from drag stake assembly and adjust upward if unit is tilling too deeply. Adjust stake downward if more depth is necessary.
- (c) Move switch to "ON" position and restart engine to continue tilling.

### **TINE SPACERS**

The two tine spacers provided can be used to replace outside tines to narrow tilled path.



**ALWAYS MOVE SWITCH TO "OFF" POSITION AND REMOVE SPARK PLUG WIRE BEFORE TRYING TO REMOVE ANY OBSTRUCTIONS. CLEAN UNIT AFTER EACH OPERATION\***

**\* ALWAYS CLEAN UNIT AFTER EACH OPERATION. This Includes removing any string, wire, vegetation or other obstructions that have wrapped around tine shaft.**